HDMI Dual Monitor KVM Switch

HKS0802A1U

HDMI Dual Monitor KVM Switch can easily integrate cross-platform computer devices. Our Dual Monitor KVM Switch can help you add more inputs to your TV or AV receiver if you have too many devices to manage. Each input device requires 2 HDMI inputs to display to 2 monitors. Support 2 display mode, you can choose any connected PC to duplicate or extend to 2 monitors, or switch any PC to display on any monitor at will. Support DCCI, you can extend the connected PCs to up to 4 monitors using 2 of this KVM Switch. Supports using USB hubs and USB keyboard and mouse. You can connect a printer, USB drive, bar code scanner or other USB 2.0 devices to this KVM. This product also supports several other switching modes. You can switch input ports with front panel button, IR signals and keyboard hot keys.


Features

- Using only 1 set of keyboard, mouse and 2 monitors to control 4 computers
- Support Unix/Windows/Debian/Ubuntu/Fedora/Mac OS X/Raspbian/Ubuntu for Raspberry Pi and other Linux basic system
- Support resolution up to 3840*2160@60HZ
- Support hot plug, disconnect or connect devices to the KVM at any time without turning off PC
- With EDID emulators in each input port, keep PCs always have correct information, prevent displays setting change while switching input ports
- Support front panel button, keyboard hotkeys, IR remote control and RS232 to control KVM
- Available to use keyboard and mouse without any delay after switching input sources
- With extra USB 2.0 port, it is possible to connect bar code scanner, USB hard device or other USB device
- Support keyboard and mouse pass through mode to improve KVM compatibility
- Support DCCI

Packing list

- 1 * Dual Monitor HDMI KVM Switch
- 1 * IR remote control
- 1 * IR Receiver cable
- 1 * DC 12V power adapter
- 1 * 3 Pins Connector(For RS232)
- 2 * Rack-ears
- 1 * AUX Cable
- 1 * User manual

Panel Descriptions

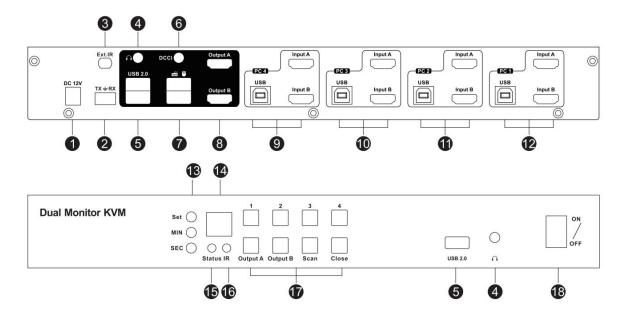


ID	Name	Description	
1	DC 12V input	DC 12V power supply	
2	RS232 port	Connect this port to any control termination, then it is able to select the input sources by sending RS232 commands	
3	Ext.IR	For extended IR receiver cable input	
4	L/R audio output	Analog audio output, connect to speaker	
5	Standard USB 2.0 port	Connect to USB 2.0 devices, printers, USB drives	
6	DCCI port	Used for product cascading to realize simultaneous display of 4 monitors	
7	Keyboard and mouse input	Connect to keyboard and mouse	
8	HDMI output ports	Connect to HDMI displays	
9	PC 4 Input	HDMI input A/B:Connect to the two outputs of the same computer USB:Connect to computer by USB Type A to Type B cable	
10	PC 3 Input	HDMI input A/B:Connect to the two outputs of the same computerUSB:Connect to computer by USB Type A to Type B cable	
11	PC 2 Input	HDMI input A/B:Connect to the two outputs of the same computer USB:Connect to computer by USB Type A to Type B cable	


Tesla smart

12	PC 1 Input	HDMI input A/B:Connect to the two outputs of the same computer USB:Connect to computer by USB Type A to Type B cable
13	Auto scan time interval settings	[MIN]: Press [MIN] to loop between 0~59 minutes [SEC]: Press [SEC] to loop between 0~59 seconds [Set]: After setting minutes and seconds, press button [Set] to enter final scan time interval setting
14	LED display	Display current selected input port
15	Status LED	Red: Turn off auto scanning mode Green: Turn on auto scanning mode
16	IR receiver	Receive IR remote signal
17	Keypad	[1~4]: Press button[1]~[4] to directly select input 1~4 [Output A]: Keyboard and mouse focus on the desktop of output A in the display mode 2 [Output B]: Keyboard and mouse focus on the desktop of output B in the display mode 2 [Output A]+[1~4]: After pressing [Output A], then press [1~4] to switch input sources of output A [Output B]+[1~4]: After pressing [Output B], then press [1~4] to switch input sources of output B [Close]: Press this button to turn on or off the LED display and monitor [Scan]: Press this button to start or stop automatically scanning between input1 to input8. The interval time can be set by [Set], [MIN], [SEC] as described above
18	Power switch	Turn on or turn off power supply
	13 14 15 16 17	13Auto scan time interval settings14LED display15Status LED16IR receiver

Connection Diagram

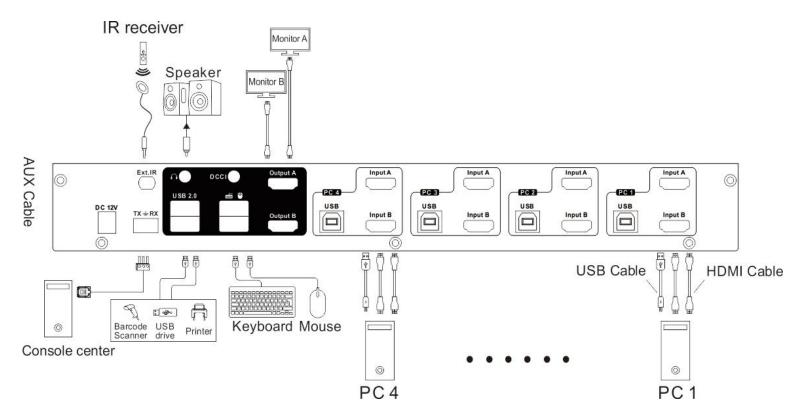

DCCI Connection Diagram

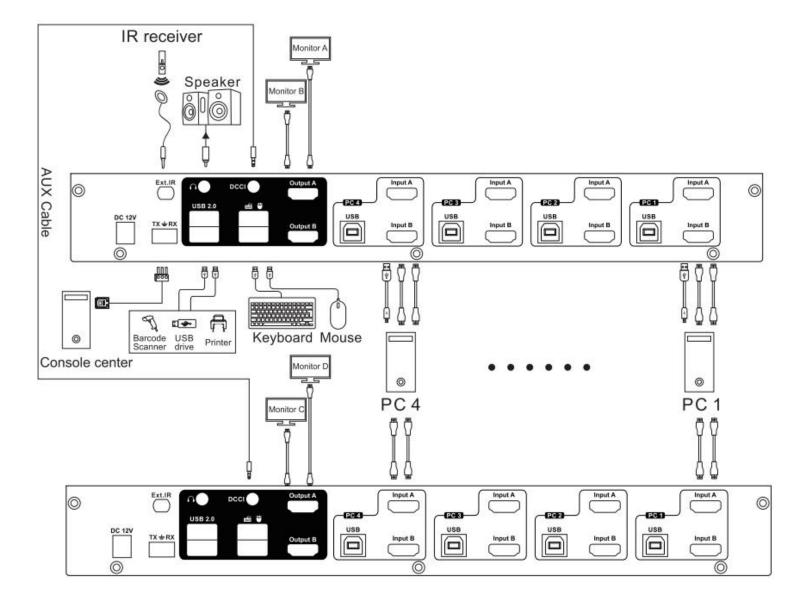

Note: The slave only connects to monitors and computers. Computers need to connect 4 HDMI cables simultaneously.

Specification

HDMI Dual Monitor KVM Switch				
Yes				
Front panel buttons	Yes			
Keyboard hotkeys	Yes			
IR remote control	Yes			
3840x2160@60Hz				
Yes				
18 Gbps				
No				
Unix/Windows/Debia	an /Ubuntu /Fedora /Mac OS X/			
Raspbian /Ubuntu for Raspberry Pi and other Linux				
based systems				
Video /Audio	8 * HDMI Type A			
USB 2.0 Hub ports	3 * USB Type A			
USB Data	4 * USB Type B			
Video /Audio	2 * HDMI Type A			
Keyboard/Mouse emulation	2 * USB Type A			
	1*AUX			
Ext.IR	1 * AUX			
Human body model - ±8kV (Air-gap discharge)				
ESD protection Human body model - ±8kV (Air-gap discharge) Mechanical:				
Metal				
350 (L) x 149 (W) x 44.5 (H) mm				
1700g				
	Front panel buttons Keyboard hotkeys IR remote control 384 384 Unix/Windows/Debia Raspbian /Ubuntu for ba Video /Audio USB 2.0 Hub ports USB Data Video /Audio USB 2.0 Hub ports USB Data Video /Audio USB 2.0 Hub ports USB Data USB Data Video /Audio USB C.1 hub ports Ext.IR Human body mod			